

INSTALLATION INSTRUCTIONS FOR YOUR FLY KILLER

PLEASE NOTE:

This insect killer is for indoor use only.

It is not suitable for use in barns, stables and similar locations

This appliance shall not be used by children. Keep out of the reach of children

Children shall not play with this appliance.

This appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

The appliance is not to be used in locations where flammable vapour or explosive dust is likely to exist.

At the end of the fly season, unplug the machine from the mains and remove the glue board. Wipe down the outside using a dry cloth.

Each year replace the UV lamp.

UNPACKING

Your **FLY-SHIELD** Insect killer has been tested before leaving the factory. If a part should be damaged in transit, please return that part to us for immediate replacement. Each carton contains:

a) Light Assembly and glue board tray b) Installation leaflet: c) Mains lead with plug. d) 4 screws & wall plugs

SITING.

PLACE THE APPLIANCE OUT OF REACH OF CHILDREN



Suitable for indoor use only but not suitable for use in barns, stables and similar locations. Not to be used in locations where flammable vapour or explosive dust is likely to exist.

FIXING.

To suspend the Insect killer, open the links of a suitable chain (not supplied) and close up round the holes in the chassis (see a). Ensure the ceiling fixings are suitable for holding the weight of the machine.

To wall mount, using the light assembly as a template, mark the wall in the desired position. Ensure the tray locating hooks are pointing up (see b). Drill 4 holes and using the wall plus supplied, screw the 2 top screws in position. Hang the machine on these screws and finally fit the bottom screws and tighten. (The FLY-SHIELD 4 is not suitable for wall fixing)

REMOVE THE PROTECTIVE COATING FROM THE GLUE BOARD BEFORE FITTING ONTO THE MACHINE

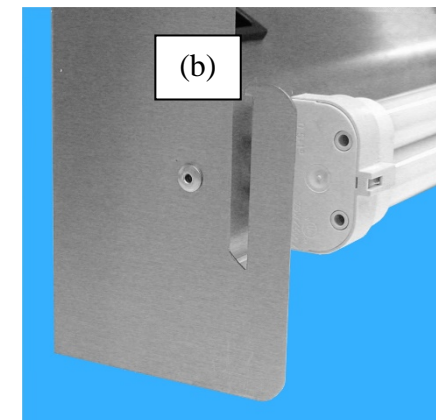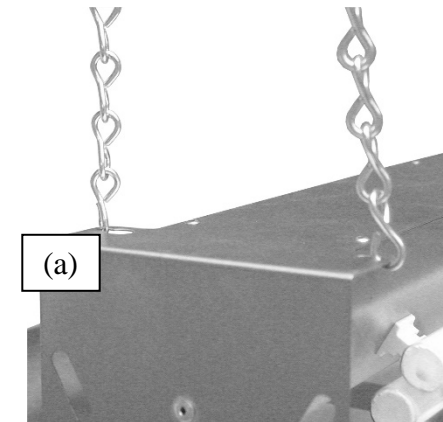

WIRING.**WARNING: THIS APPLIANCE MUST BE EARTHED.**

The Insect killer comes complete with cable and plug. If you wish to change the plug then wire up as follows:

The brown lead to the live terminal marked L

The blue lead to the neutral terminal marked N

The green & yellow to the earth terminal marked E or 

CHANGING THE GLUE TRAYS.

Un-hook the tray from the light assembly. Using the tabs on the existing board, pull out from beneath the edge of the tray (see (c)). Fit the new board into the tray then remove the protective covering.

REPLACING THE UV LAMPS.

Replacement lamp ref = 18watt lynx. Order code LL18WX-W (standard lamps) LL18WS-W (Shatter resistant lamps)

At the end of the season, unplug your insect killer from the mains and proceed as follows:

- a) Take the front glue tray off the machine
- b) Remove the mains 'kettle' plug from the machine
- c) Pull back the spring holding the lamp in position
- d) Pull out the lamp and replace with a new one

After cleaning, assemble in reverse order.

GUARANTEE

Your Insect killer is guaranteed for a period of 2 years (except the UV lamp(s), glue boards and starters) from the date of purchase. Should it fail in normal use, within this period, simply return it, properly packaged for immediate repair or replacement.

