

INSTALLATION INSTRUCTIONS FOR YOUR AIR FRESHENER

This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

UNPACKING.

Your Air freshener has been tested before leaving the factory. If any part should be damaged in transit, please return that part to us for immediate replacement. Each air freshener carton includes:

- a) Air freshener machine
- b) Installation leaflet
- c) 4 Wood screws
- d) 4 Wall plugs.
- e) Special spanner

SITING.

To ensure your air freshener works with maximum efficiency, it should not be located near doorways, windows, air vents, extractor fans etc. The height at which to install it is not critical but placing it too high might present problems when replacing the fragrance and filter. A minimum height of 2.5 metres is recommended to prevent the airflow from blowing onto the public.

FIXING

Your air freshener comes complete with screws and wall plugs for screwing to the wall. Remove the side plate by turning the plastic retainer at the top through 90 degrees (using the special spanner provided) and lifting off. Remove the 2 screws holding the front in position, slide sideways and lift off. Locate the chassis in the desired position and mark through, the 4 fixing points ensuring that the electrical connections are at the top. Drill the wall to suit the plugs supplied and fit the chassis to the wall.

WIRING

WARNING - THIS APPLIANCE MUST BE EARTHED

The wiring should only be carried out by a qualified electrician. The 220/240 volt 50Hz supply must be connected to the air freshener via a double pole fused isolator having a contact separation of at least 3mm between poles, using a mains lead of at least .75mm. Bring the mains cable through the cord clamp adjacent to the terminal block. Wire up as follows:

The red or brown lead to the terminal marked L

The black or blue lead to the terminal marked N

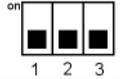 
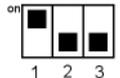 
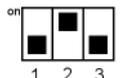 
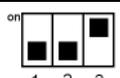 
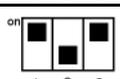 
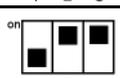 
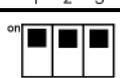 
The green or green and yellow lead to the terminal marked E 

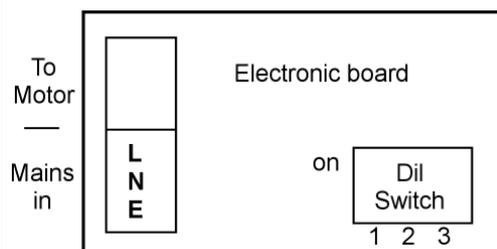
Re-tighten the cord clamp.

It is recommended that the electrical installation is carried out and checked by a qualified electrician and inspected every 6 months.

SETTING THE ON/OFF TIMES

Your air freshener has a variety of on/off settings to suit the environment in which it is fitted. Simply set the dil switches, located on the electronic board, to your requirements using the chart below. Ensure the mains electricity is turned off before adjusting these timings.

	1	2	3	switch number (1 = on)
	0	0	0	Continuous
	1	0	0	1 minute on 5 minutes off
	0	1	0	2 minutes on 5 minutes off
	1	1	0	5 minutes on 5 minutes off
	0	0	1	1 minute on 10 minutes off
	1	0	1	2 minutes on 10 minutes off
	0	1	1	5 minutes on 10 minutes off
	1	1	1	TEST - 10 seconds on 10 seconds off



These timings are approximate

GEL & FILTER REPLACEMENT.

Refer to the instructions in the box of gels (Purchased separately).

NOTE: The mains supply must be isolated before replacing the gel and filter, cleaning or adjusting.

RE-FITTING THE FRONT COVER

Replace the front cover, sliding it on sideways and fixing with the 2 screws and shake proof washers. Ensure the shake proof washers are used, and the screws fully tightened, as these ensure earthing to the front cover.

GUARANTEE.

Your air freshener is fully guaranteed for a period of 1 year from the date of purchase. Should any part fail during normal use, within this period, simply return it for immediate repair/replacement.