
INSTALLATION INSTRUCTIONS

HORIZONTAL WALL MOUNTED BABY CHANGING STATION - ACBCHG

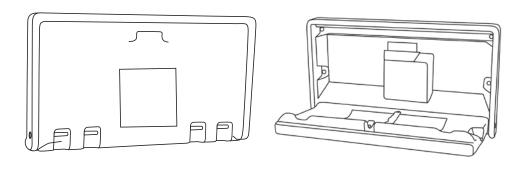

Step 1.

Remove changing station from the shipping container and check for any freight damage.

Step 2.

Identify the best location for installing the unit. Hold the unit in place and open the bed. Make sure you have taken the operating clearance into consideration.

Step 3.

Based on the type of wall on which you will be mounting the station, determine the best method of mounting. You may have left over hardware when you are finished with installation.



Step 4.


The horizontal unit has four mounting holes provided in the back wall of the unit. The four holes are positioned on a 32" (813mm) stud centre.

If possible, locate the wood wall studs for fastening the changing station in the desired location. If the wall has wood studs that are not on centre as outlined, make sure at least one side of the unit is installed into the stud and that the opposite side is mounted into an area that has been reinforced to support the weight of the unit and child. If the wall is solid masonry, use wall plugs to anchor the unit to the wall.

Step 5.

Find the stud where you will be attaching the left side of the unit to the wall. Measure up from the floor 44" (1118mm), at the centre of the stud, and mark the wall. Mark remaining holes using a measuring tape to make sure holes are precisely positioned. Hold unit in place to check. Use 3mm drill bit to make pilot holes and the four 1/4" x 3" panhead screws with washers (supplied) to attach the unit to the wall studs. This will place the bottom of the station 261/2" (673mm) from the floor and the top of the bed at 33" (838mm) from the floor. If mounting into masonry wall, use wall plugs.

If the wall surface is tile over wood studs, use a 12mm masonry drill bit for the pilot hole until you hit the stud. Change bit to 3mm regular drill bit. Use four ¼" x 3" (6mm x 76mm) panhead wood screws with washers (supplied).

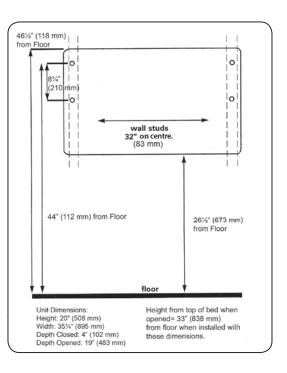

Robert Scott & Sons Ltd +44 (0)1457 819494 www.robert-scott.co.uk

OPERATING INSTRUCTIONS

Please Note:

To assure proper installation, it is suggested that a qualified person install the Baby Changing Station. Robert Scott will not be responsible if the station is not installed properly.

Robert Scott Baby Changing Stations must be properly attached to a permanent wall that is capable of holding a substantial load. The changing unit is rated to support a static load of 136 kgs (300 pounds) and has been tested to 182 kgs (400 pounds). The unit must be properly installed on to a permanent wall that is capable of supporting such weight.

Using Restraint System

To fasten the waist restraint strap, place strap around childs mid-section, and push spring tabs into buckle until both spring tabs lock in place with an audible 'click'. Straps can be adjusted to make strap tighter or looser as required.

Inspection Criteria:

A properly maintained baby changing station:

- Opens and closes smoothly
- Has both ends of a functioning, non-frayed strap: buckle clicks when closed and strap is attached to unit at both ends.
- Provides a clean, convenient place for parents to attend to their children.

WARNING: Do not leave the child unattended. All assembly fittings should always be correctly tightened and checked regularly.

Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc, in the near vicinity of the changing unit.



Do not use changing unit if any parts are broken or missing.

A changing pad is not required for this product.

Additional or replacement parts shall only be obtained from the manufacturer or distributor.

Unit should be cleaned once or more daily with a clean nylon brush and spray disinfectant.

INSTALLATION AND OPERATING INSTRUCTIONS HORIZONTAL WALL-MOUNTED BABY CHANGING STATION - ACBCHG

MATERIALS SUPPLIED:

(4) 1/4" x 3" Panhead wood screws

(4) 1/4" Flat washers

TOOLS WHICH MAY BE NEEDED FOR INSTALLATION:

Measuring Tape Gloves Level Stud Finder Pencil Drill
Phillips Screwdriver
5mm Drill Bit (masonry)
3mm Drill Bit (regular)
12mm Drill Bit (regular)

Wall Plugs & masonry)





You are responsible for the safe operation of this unit.

