

Thank you for purchasing a 3G Finn Heater

Electric heater with temperature regulator



Read carefully before installing



3G Electric Heaters are designed for use with water, water/glycol filled radiators. Select the correct 3G heater for your radiator from the list below.

Easy selection of heating element for radiator:

Radiator's listed heat output	Recommended heater
300 - 600W	3G 0,3
600 - 900W	3G 0,6
900 - 1200W	3G 0,9
1200 - 1500W	3G 1,2
more than 1500W	3G 1,5

The heater complies with EC Certificate.

Installation instructions:

Heater installation and wiring should be carried out by a qualified installer and electrician

Installation and starting of GEC heater

CAUTION

Read prior

to commencing

installation

Electrical connection

should be entrusted

to authorised electrician

🛕 SAFETY 🕮



The heater should be installed by

a qualified person. Bathroom radiators fitted with electric heaters should be fixed not less than 60 cm from a bath, shower or wash basin and never

above a bath.

For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm.

For version with a plug, the heater should be plugged in only to a socket with earthing contact.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given

supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance

Cleaning and user maintenance shall not be made by children without supervision

The heater MUST BE DISCON-NECTED before cleaning the casing. AVOID SOAKING THE CASING.





Connect the heater to the mains 230 V.

At this point the 3G heater may be hard wired to the electrical system in compliance with UK electrical regulations. Installation should be en carried out by a qualified electrician.

Wire colours:

Brown = Live, Blue = Neutral, Green and Yellow = Earth

(2)Starting of heater

The 3G heater is switched on by turning the control knob clockwise, and the LED on the casing will light up. The star shaped position on the control knob is for frost protection (approx. 10°C).

The range of temperature regulation is from 10°C to 65°C.

The heater is turned off by turning the control knob as far as possible anticlockwise (Fig.1)

NOTE

- The 3G heater MUST BE DISCONNECTED before cleaning the casing. The casing may be cleaned using a soft cleaning agent on a damp cloth. AVOID SOAKING THE CASING.
- . When your heater is not in use, switch it off by turning the adjustment knob counterclockwise until it stops.
- During periods of low temperature always select anti-freeze function before you leave home.
- · Heater is not intended for operation in oil.
- . In case of operational failure or damage to the electricity supply cable the 3G heater should be disconnected and return to the supplier.
- . The power cable is not replaceable. Z-type connection. In case of power cable damage, please send the heater to the manufacturer for repair.
- · This equipment is not suitable for use by people (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge about the equipment unless they have been given instruction or supervision by the person responsible for their safety. Please, keep children away from the equipment.
- · Please keep the gurantee card

	GUARANTEE CERTIFI	CATE
Electric	heater with electronic thern	nostat type: 3G

;	Series no.
: :	Date of sale:

Sale point stamp, seller's signature

GUARANTEE TERMS

The manufacturer's guarantee covers the period of 24 months from the date of sale, but not longer than 36 months from the date of the heater production. The manufacture defects occurred during this period will be repairedat the manufacturer's cost or the unit will be replaced with a new one with the same parameters. Complaints are considered within 14 days of their receipt.

The Guarantee does not include:

Use of the product without reference to the attached instructions. Any visible damage of the heater and programmer resulting from misuse. Damage to the manufacturer's seals terminates the guarantee.

Warranty card must be legibly filled out at the point of purchase. Any modifications of the warranty terminate its validity. The warranty is valid only with a bill of sale.

CNM Online

T: 01977 663331 E: cnmservice@cnmonline.co.uk Unit 2, North Point Business Park, Selby Road, Eggborough, North Yorkshire, DN14 0JT