


Fixing instructions for T600 Deluxe Toilet Roll Holder

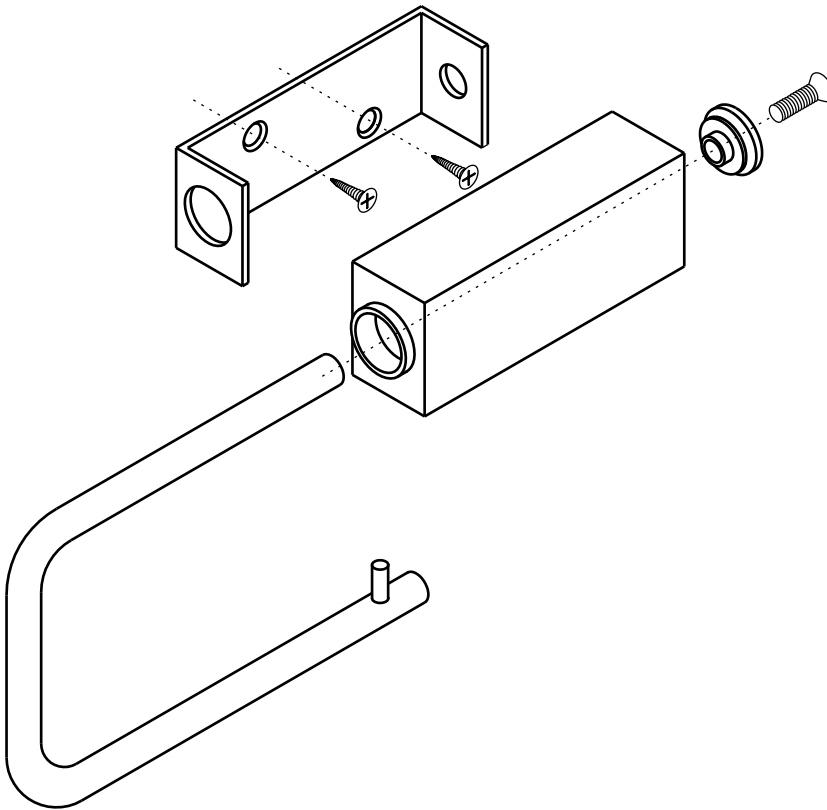

Fixings

2 No. 10mm X No.8 CSK S/S Undercut Woodscrews
2 No. 19mm X No.8 CSK S/S Undercut Woodscrews
1 No. 3mm Allen Key



1. Determine correct position.
2. Remove allen headed M5 machine screw and flange from end of holder, remove 'U' shaped roll holder and slide out stainless steel wall bracket from bracket cover.
3. Using stainless steel wall bracket as template drill two pilot holes.
4. Screw bracket to partition or wall with screws provided.
5. Replace bracket cover and push 'U' shaped roll holder through cover and wall bracket replace flange washer and M5 allen screw.